

**ZURUWIFT
WORKS
LTD.**



Kapture[®]

Manual


Scan & Pair



Press the middle button on the sensor to activate all sensors

Scan & Pair

Names of connected sensors will show up on the left side of the list

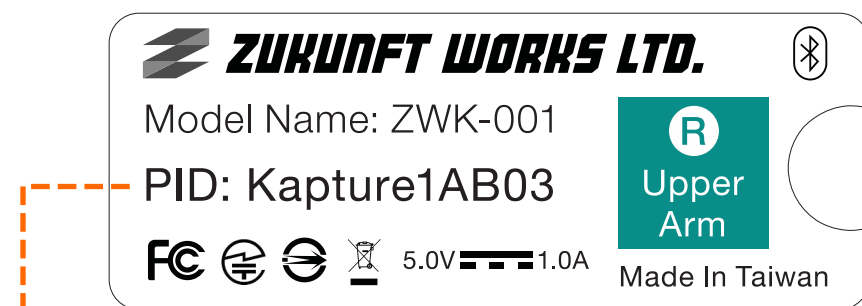

Scanning 

→ Kapture1AB03
KaptureBD643
KaptureAG592
KaptureCE128
KaptureAC498
KaptureAE332
KaptureBQ257
KaptureTK245

Scan

AC ' 587 ▾

Head

Pair

Chest

R Upper Arm

R Forearm

R Hand

L Upper Arm

L Forearm

L Hand

BD ' 643

AG ' 592

CE ' 128

AC ' 498

AE ' 332


BQ ' 257

TK ' 245

Click the name of each sensor for mapping it to a desired body part



Make sure that all lights on the sensors have turned green before moving to the next step

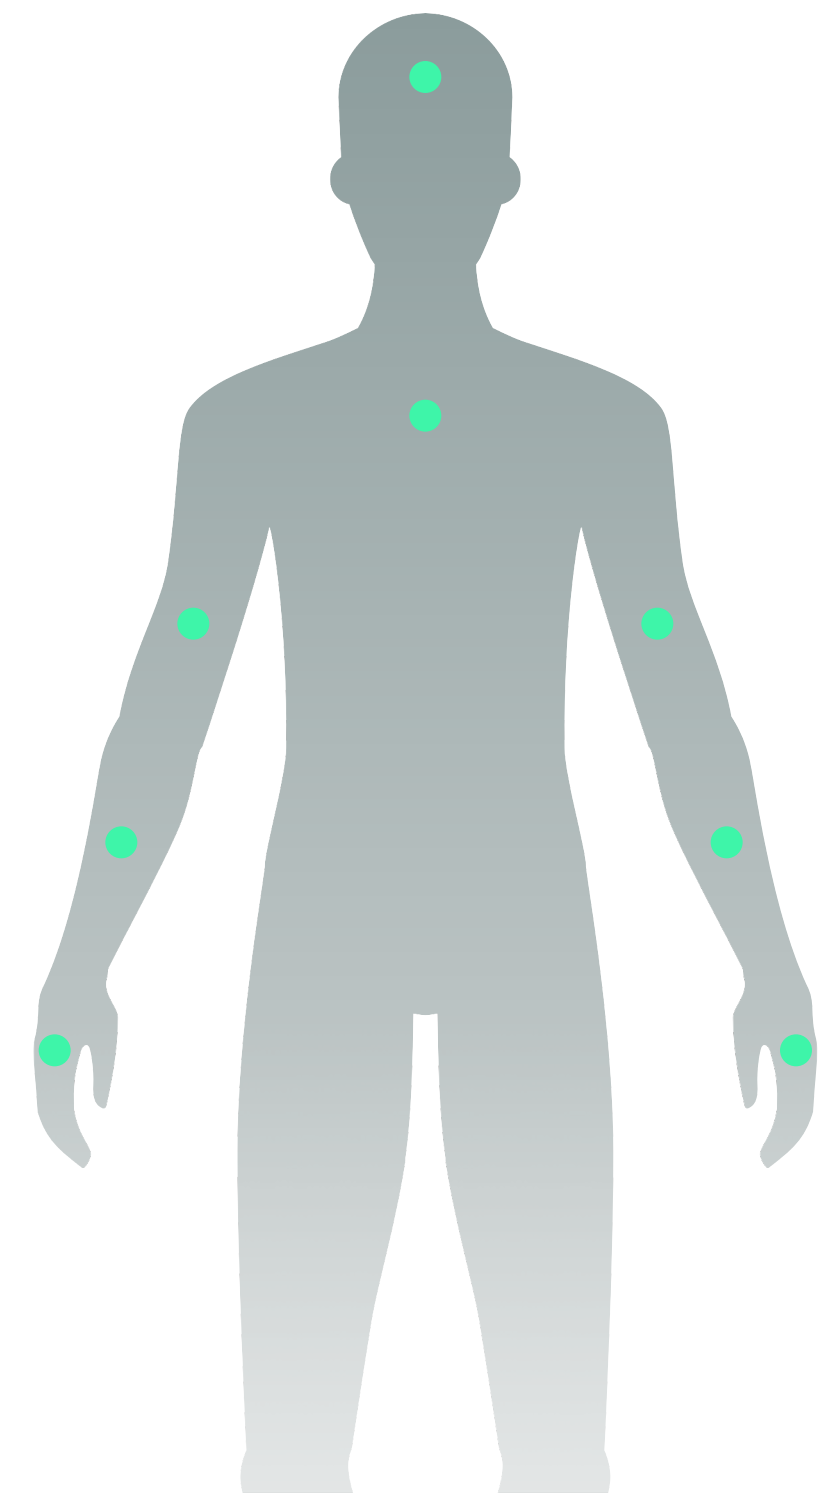


Wearing


Fit the straps and sensors to the specified positions



Please make sure all the arrows on the sensors are pointing down when you are in a natural standing pose

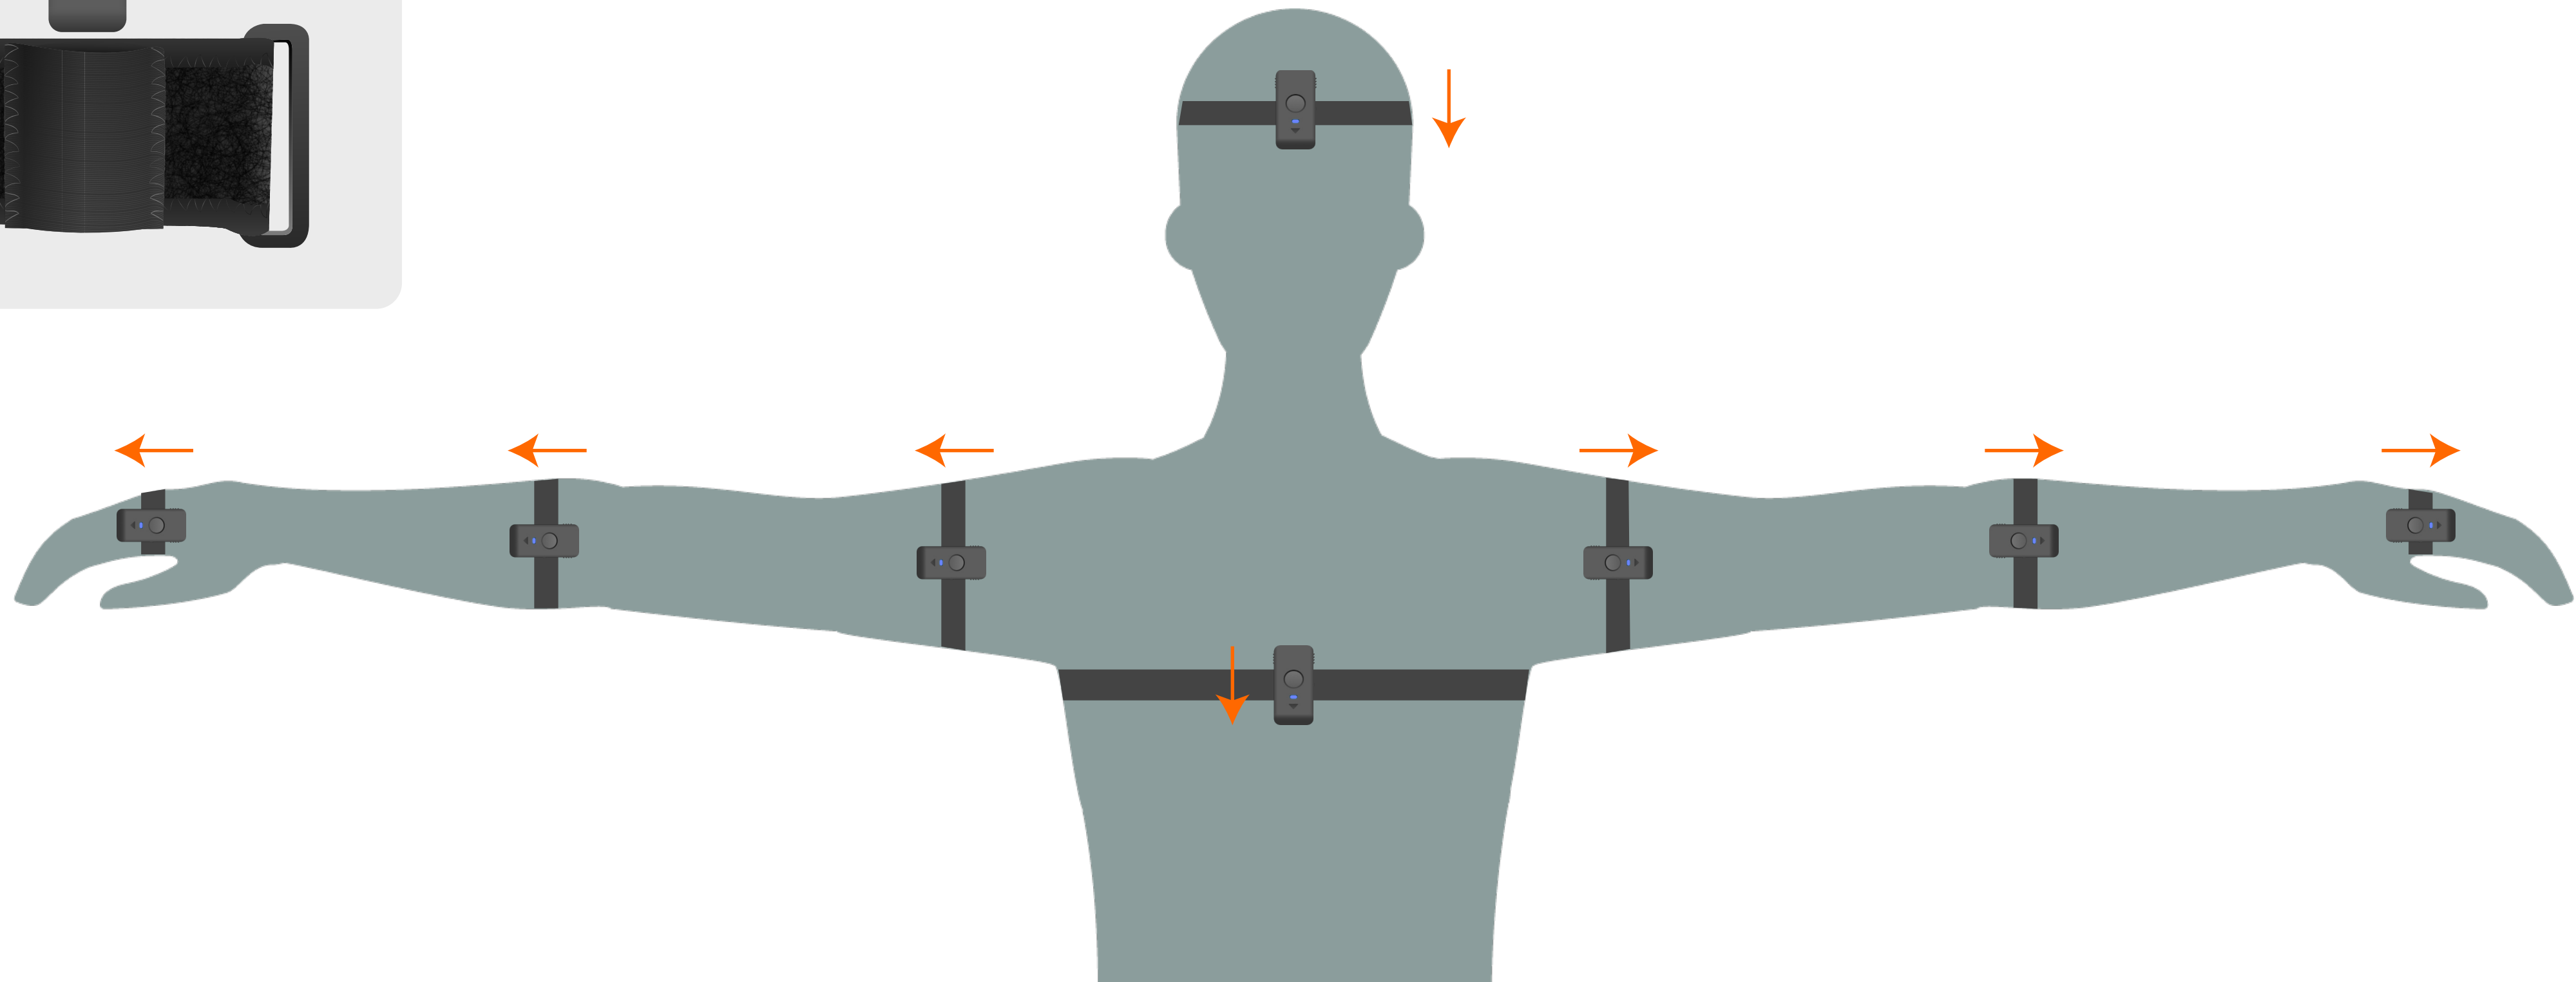

Body Manager

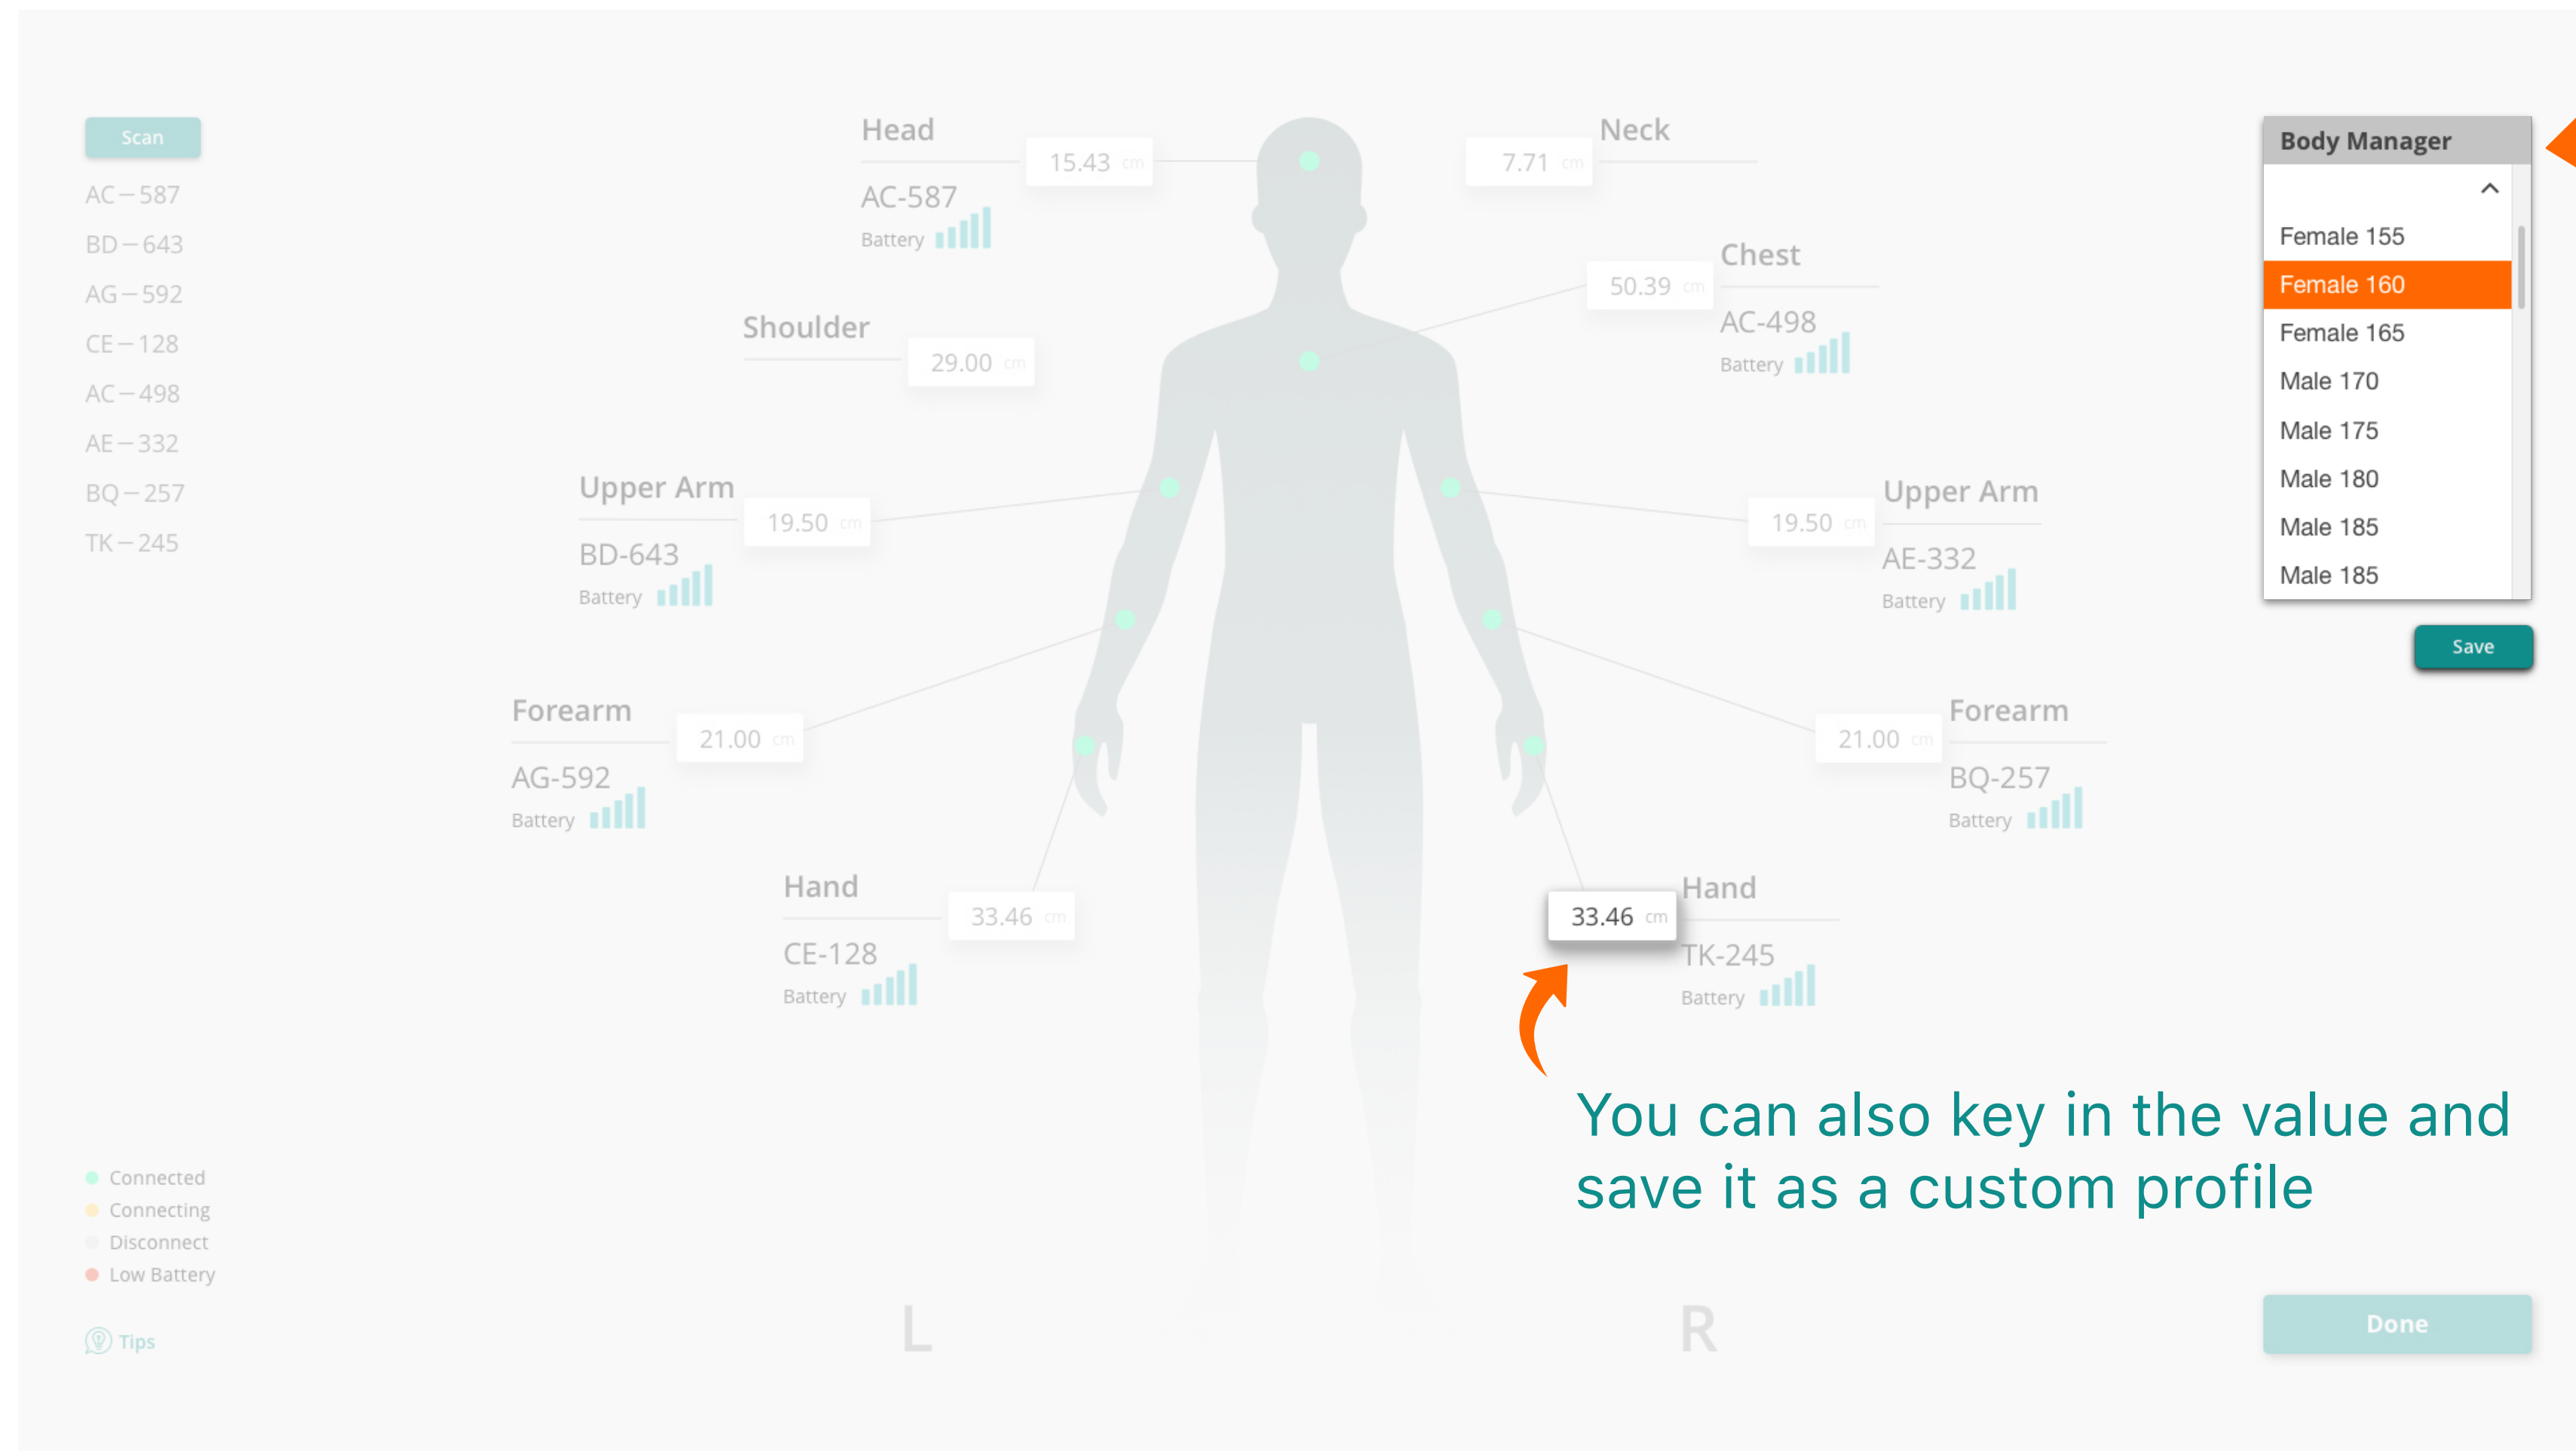

You can pick a proper body profile from the Body Manager on the upper right corner

You can also key in the value and save it as a custom profile

Calibration

Click on Calibration button and go on with the on-screen instruction that will guide you through the process.

► Calibration can be done while standing or sitting.

The screenshot shows the Kapture Calibration Guide interface. The main window displays a 3D model of a person in an 'L Pose' with arms extended forward. A progress bar at the bottom indicates 20% completion. The interface includes a sidebar with a 'Calibration' button, a 'Body Details' table, and a 'Deploy' button. A legend on the right explains the connection status indicators.

Calibration Guide

STEP 1
L Pose

Please raise your hands forward, palms parallel to the ground, and maintain this position until the progress is completed.

20%

Body Details

Female 150	
Head	15.43
Neck	7.71
Body	50.39
Shoulder Width	29.00
Upper Arm	19.50
Forearm	21.00
Palm	15.50


Device connection status

- Connected
- Connecting
- Disconnect
- Low Battery

Annotations:


- Go back to setting
- Device connection status
- Body details in use
- Once the "Calibration" button is clicked, it will start the process
- Click the close button to turn off all devices at once
- Enter the value here to open the port, and click the "Deploy" button to connect with Morecap.

Body Measurement

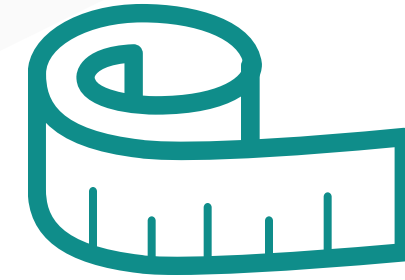

How to take accurate body measurements

Use a soft measuring tape or piece of string that can later be measured

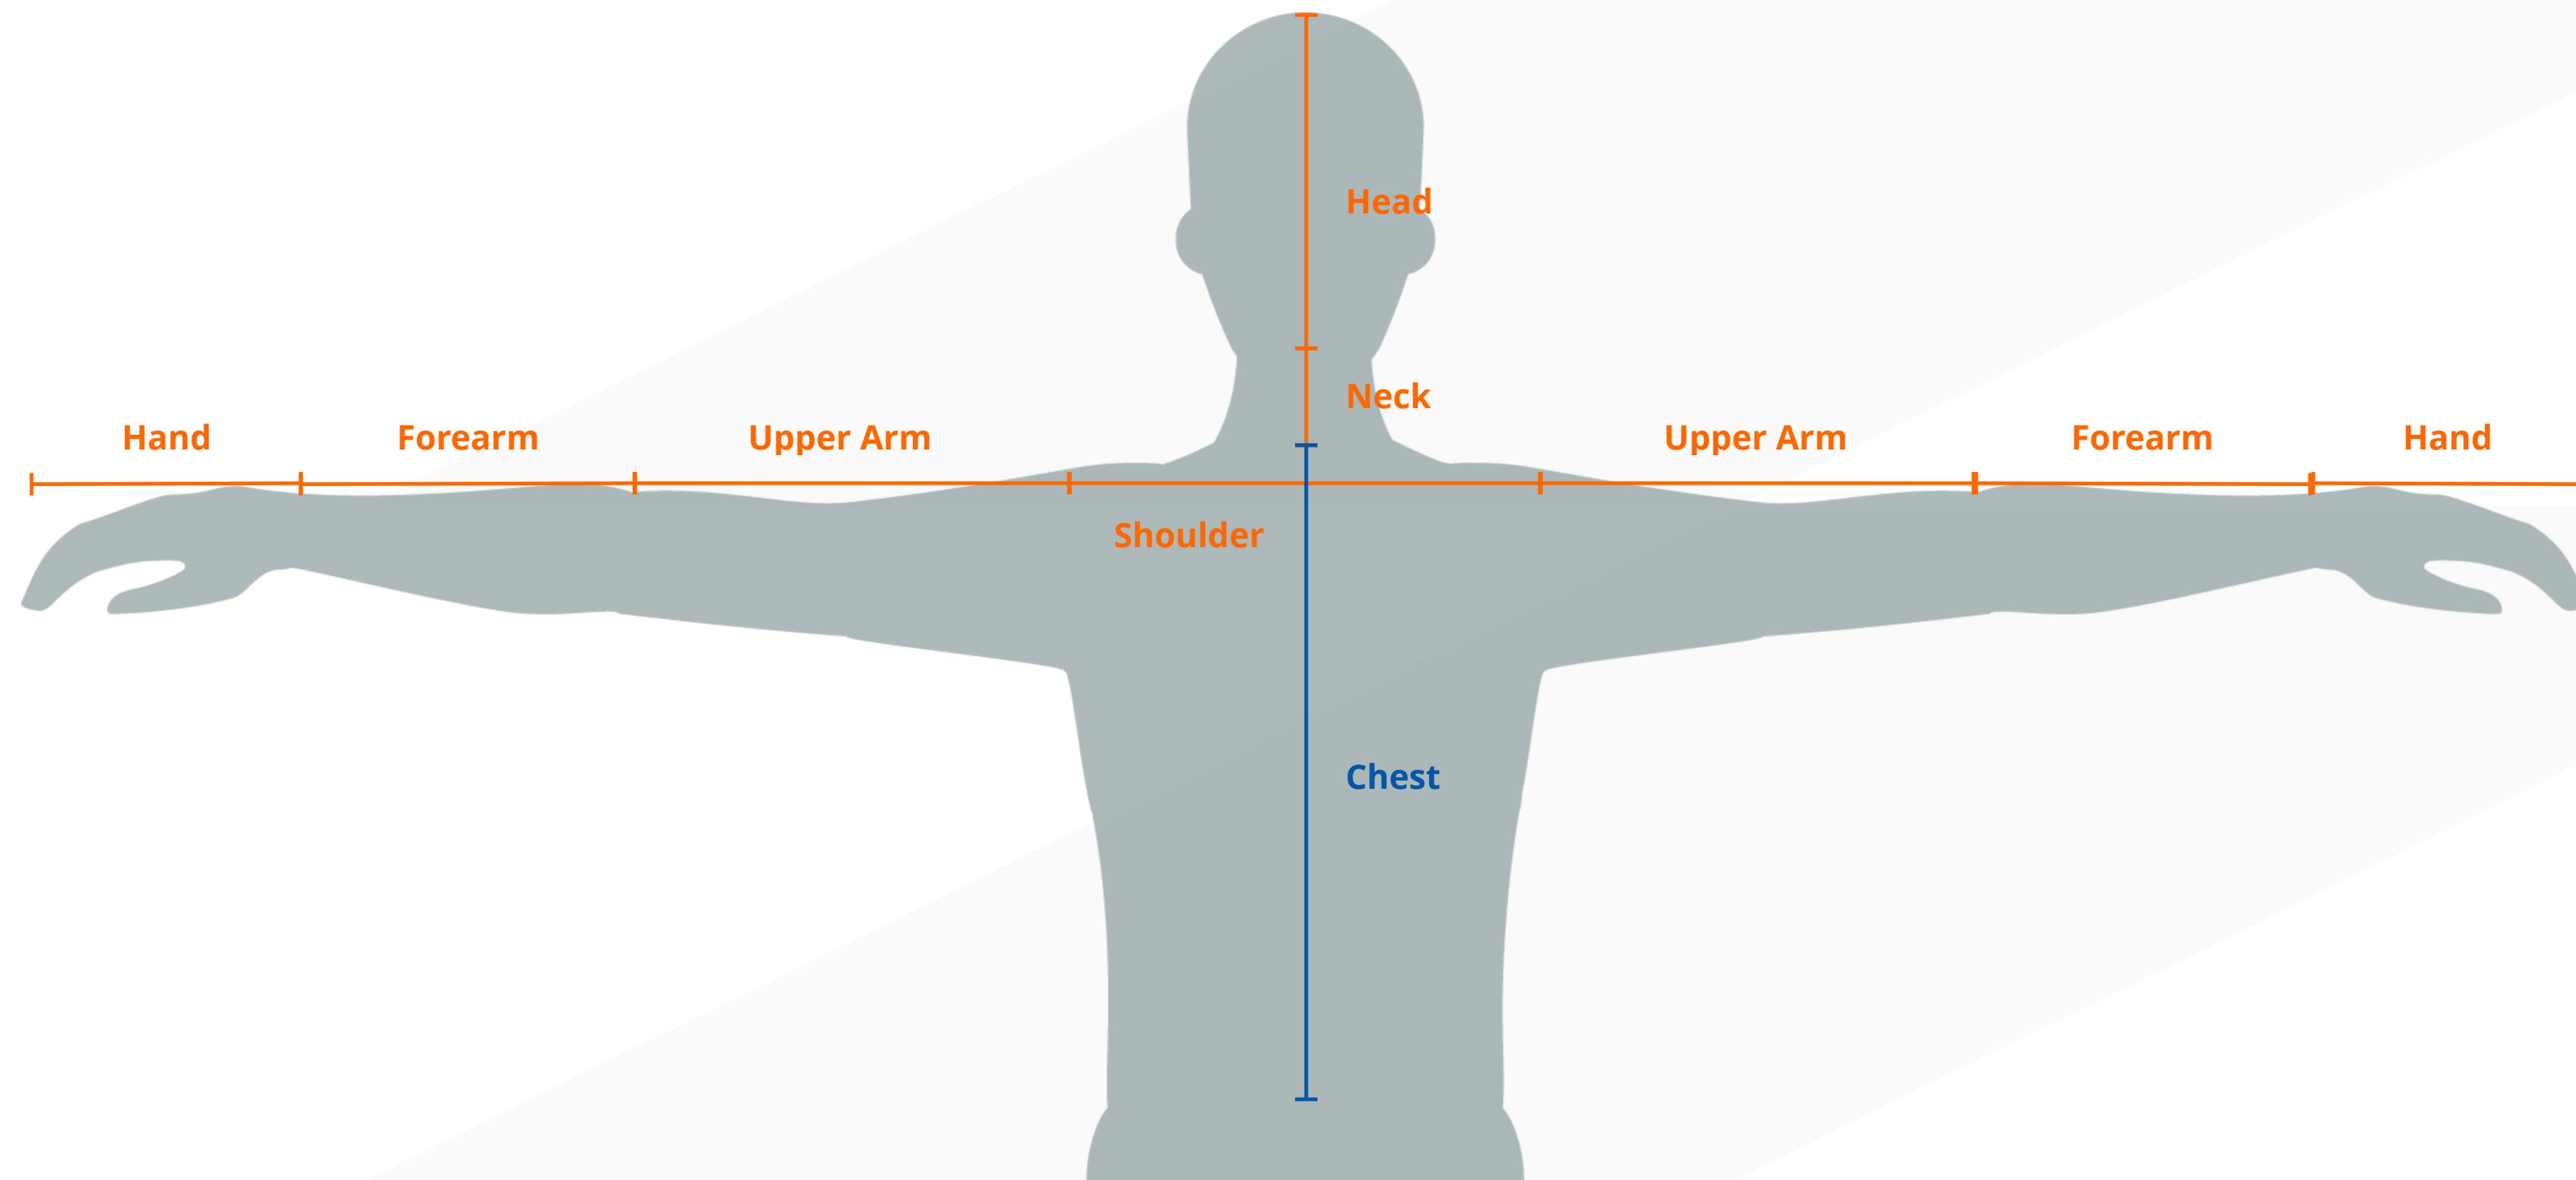



Notice

- The sensors are connected by bluetooth, please minimize the surrounding electronic devices that may interfere.
- After the sensors are connected, please let the sensors stand still for 10 seconds before wearing.
- If the sensors do not turn on or off, please use a paperclip or pin to press the "Reset" button.
- After a successful connection, you can go back to the "Kapture" interface for calibration at any time without closing the "Deploy" button.



Start to use and have fun !